



T4 2020 SFX Conversion Manual and Set-up

Qty.	Nr.	Name
1	SFXX-CC1	Chassis
1	SFXX-MM1	Motormount
1	SFXX-ASM	Alu Servo Mount
1	SFXX-CSP	Carbon Servo Plate
2	SFXX-TDN	Narrow Topdeck
2	SFX-TDS	Topdeck Screw
4	TSX1	1mm Shim

Note: Assemble Motor Mount, Spur Gear and Belts as in Car Manual.

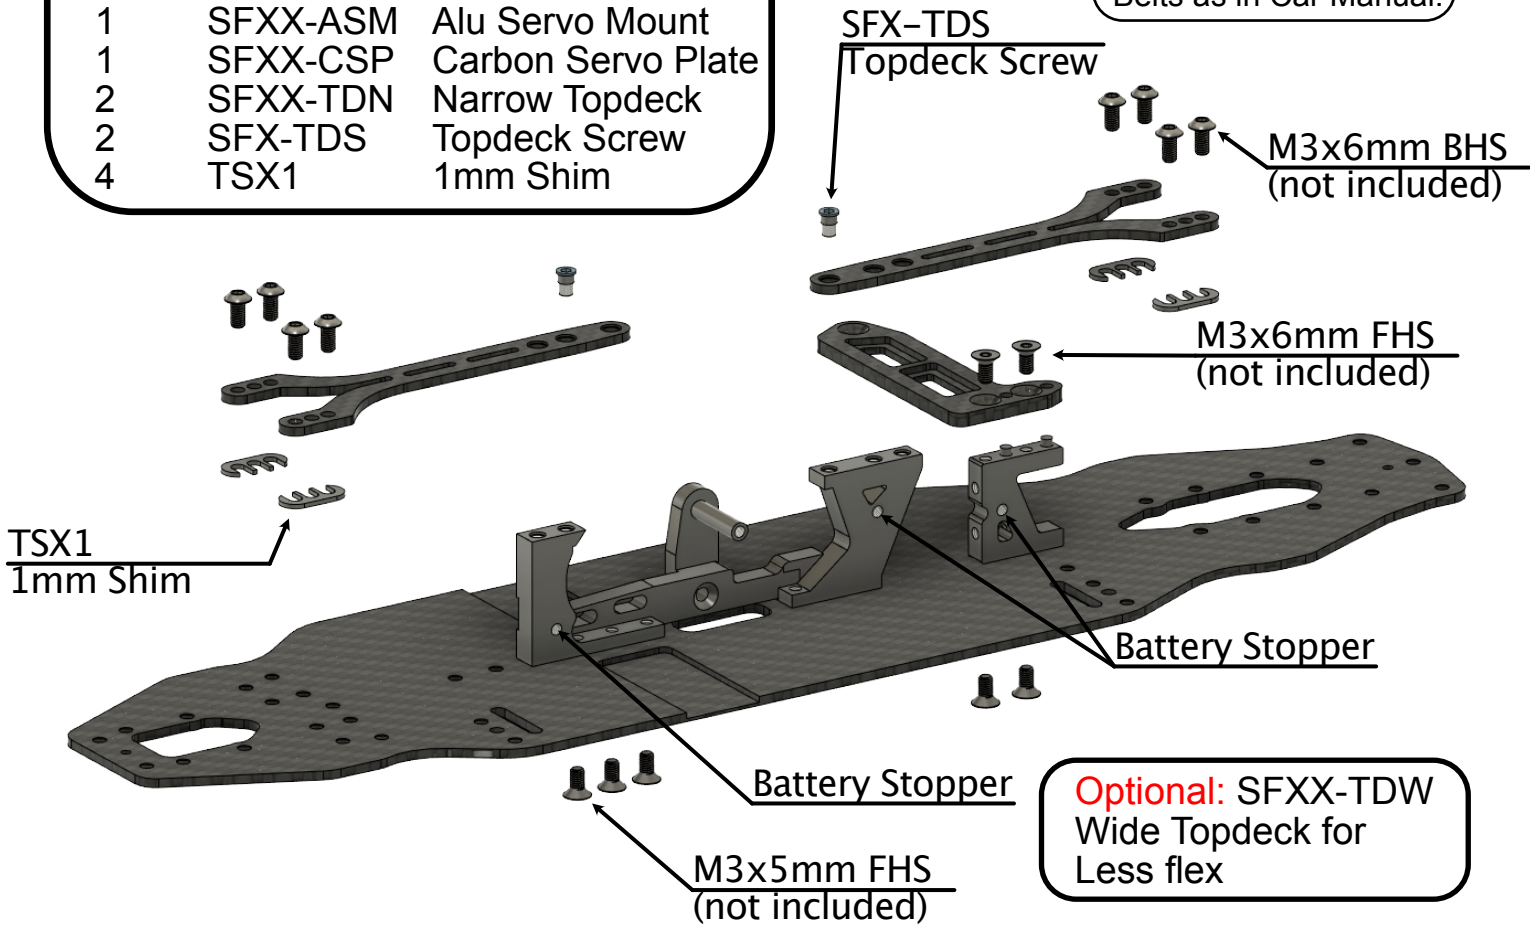

Flex Set-up Sheet

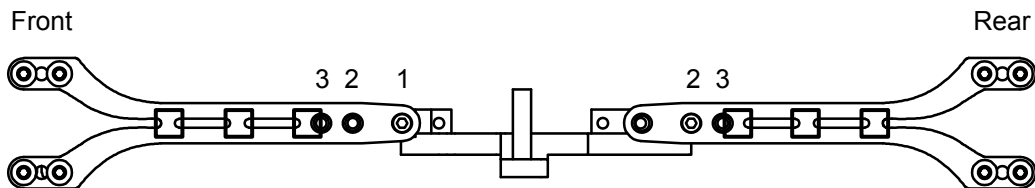

- SFXX-TDN Narrow Topdeck
 SFXX-TDW Wide Topdeck


Notes:




T4 2020 SFX Conversion Tips and Tricks

Tips and Tricks

Screws

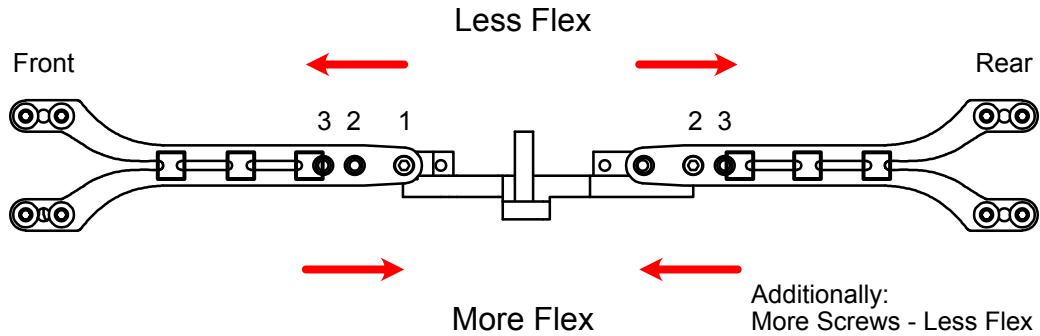

Cutouts

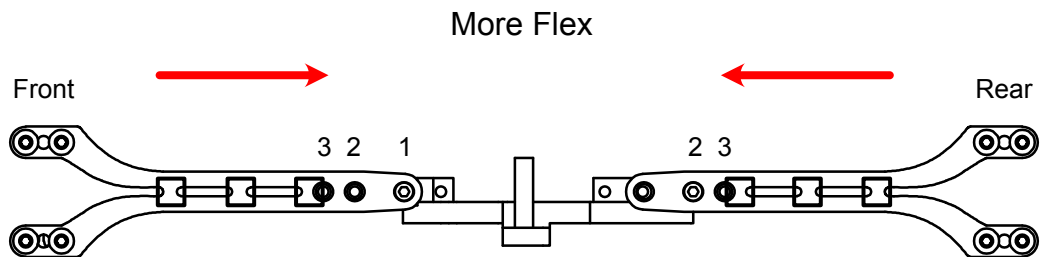


Topdecks


More Flex **SFXX-TDN Narrow Topdeck**

Less Flex **SFXX-TDW Wide Topdeck**

Standard Setting

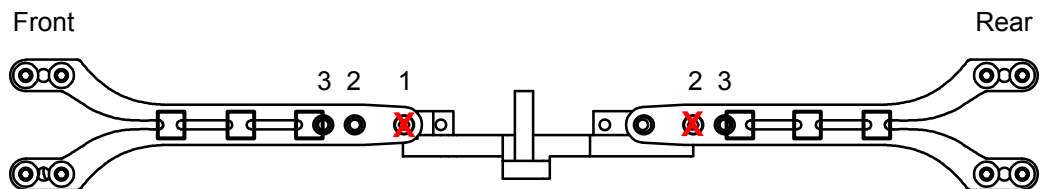

SFXX-TDN Narrow Topdeck

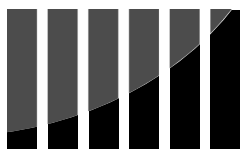

Low to High Grip

